


# element Aventos HK-XS Lift System Doors Quote Order

Company:			Email (or fax) form to your authorized distributor:	
Contact Name:			Authorized Distributor:	
Address:			Branch Location:	
City / State / 7in:			Email / Fax:	
			Ph: (877) 332-3396 Fx: (704) 332-3267 www.element-designs.com orders@element-designs.com	
Fax #:			Project Name:	
Email:			Date: PO #:	
O Door Type     Aluminum Frame:     AF001**    AF002		Aventos HK-XS Drilling & Hardware   Include AVENTOS Liff System Hardware & Hinges with door:		
		npered safety glass & will not have etched ounless otherwise specified at time of order.	☐ FULL Overlay Straight Arm Self Close ☐ HALF Overlay Self Close	
Item Qty Down Width	or Dimensions in	Element Designs Use Only Price Ext. Price	Hinge Mounting Plate (select one): QTY: — — — — — — — — — — — — — — — — — — —	
1			Aventos Lift Mounting Plate (select one): QTY:	
3			FRAME  ☐ Screw-on (20K5101) ☐ Screw-on (20K5501)  ☐ EXPANDO (20K51E1)	
4			Door Mounting Plate QTY:	
5			☐ 20K4104 (wide frame) ☐ 20K4104A (narrow frame)	
6			5 Decorative Hardware & Handles	
7			Drill for handle holes (Must specify handle location on pg 2)	
8			— Natural Anodized — Brushed Stainless & ORB — Various Finishes — Knobs Bar Pulls Bar Pulls Finger Pulls	
Special Instructions: Hardware:			□ K001         □ P1-127         □ P1-76S         □ P2-42         □ K005         □ P1-190         □ P1-192S         □ P2-42S         □ P2-42S        □ P2-42S         □ P2-42S         □ P2-42S         □ P2-42S         □ P2-42S         □ P2-42S         □ P2-42S         □ P2-42S         □ P2-42S         □ P2-42S         □ P2-42S         □	
Subtotal:			☐ K006         ☐ P1-250         ☐ P1-320S         ☐ P2-42ORB         ☐ Market Filter Fi	
	Shipping: TOTAL:			



# **Aluminum Frame Door**

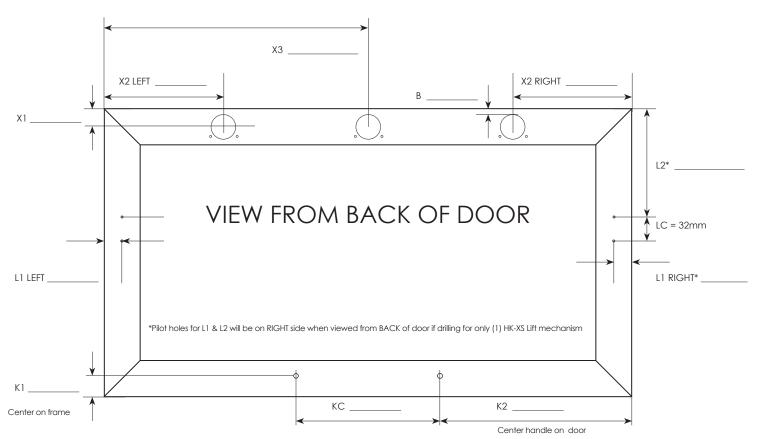

To locate L1 & L2 pilot holes for 20K4104 (wide frame) or 20K4104A (narrow frame) screw-on Door Mounting Plate:

## $\label{lem:frameless} \textbf{ CABINETS with CLIP top hinge - Wide frame doors:}$

L1 = 15.5mm + Overlay

L2 = 126mm + Mounting Plate Height + Hinge Arm Crank = Overlay

#### FRAMELESS CABINETS - NARROW frame doors: (Profiles AF001 & AF008):

L1 = Overlay - 4.5mm

L2 = 126mm + Mounting Plate Height + Hinge Arm Crank = Overlay

#### FRAME CABINETS with CLIP top hinge - Wide frame doors:

L1 = 15.5mm + Overlay

L2 = 126mm + Mounting Plate Height + Hinge Arm Crank = Overlay

#### FRAME CABINETS - NARROW frame doors: (Profiles AF001 & AF008):

L1 = Overlay - 4.5mm

L2 = 126mm + Mounting Plate Height + Hinge Arm Crank = Overlay

### FRAME CABINETS with COMPACT hinge - Wide frame doors:

L1 = 15.5mm + Overlay

L2 = 134mm